
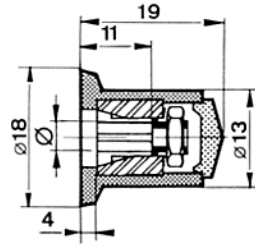


Bouton haut jupe point standard


STÖCKLI

Fixation par pince



Fixation par vis

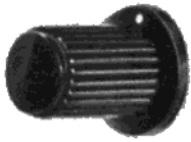


Ø	REFERENCE
3	302-13-30
4	302-13-40
5	302-13-50
6	302-13-60
1/8"	302-13-10
1/4"	302-13-20

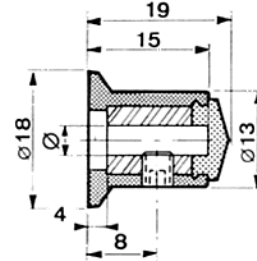



Ø	REFERENCE
3	102-13-30
4	102-13-40
6	102-13-60
1/8"	102-13-10
1/4"	102-13-20

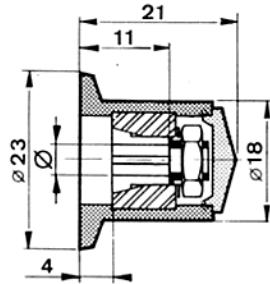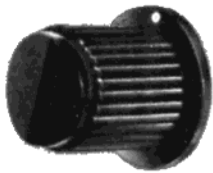


Ø	REFERENCE
3	302-14-30
4	302-14-40
5	302-14-50
6	302-14-60
1/8"	302-14-10
1/4"	302-14-20

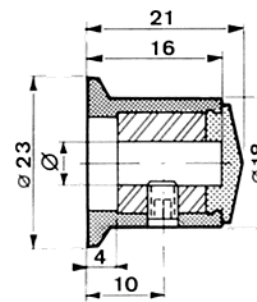


Ø	REFERENCE
3	102-14-30
4	102-14-40
6	102-14-60
1/8"	102-14-10
1/4"	102-14-20

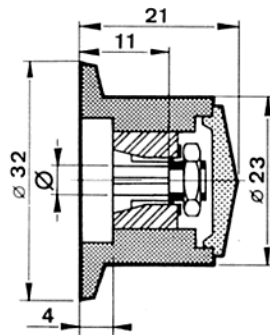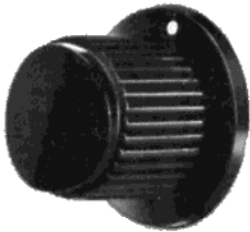


Ø	REFERENCE
3	302-15-30
4	302-15-40
5	302-15-50
6	302-15-60
1/8"	302-15-10
1/4"	302-15-20

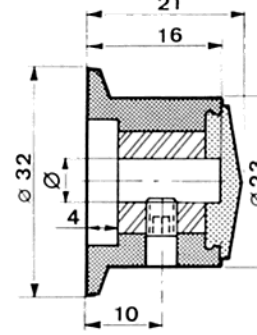



Ø	REFERENCE
4	102-15-40
6	102-15-60
1/4"	102-15-20

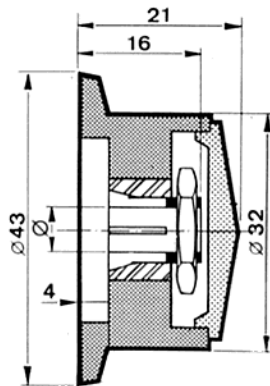

Ø	REFERENCE
4	302-16-40
5	302-16-50
6	302-16-60
1/4"	302-16-20

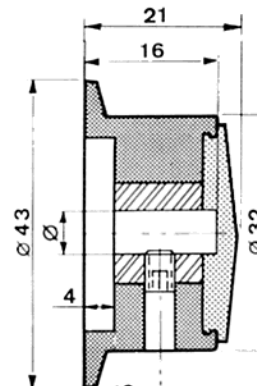

Ø	REFERENCE
4	102-16-40
6	102-16-60
8	102-16-80
10	102-16-00
1/4"	102-16-20
3/8"	102-16-90

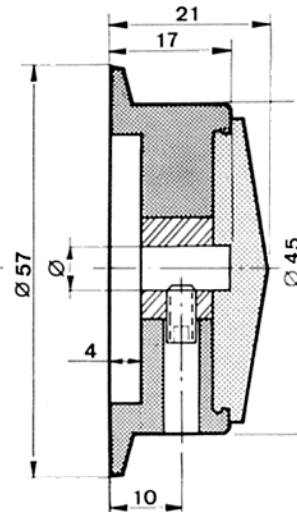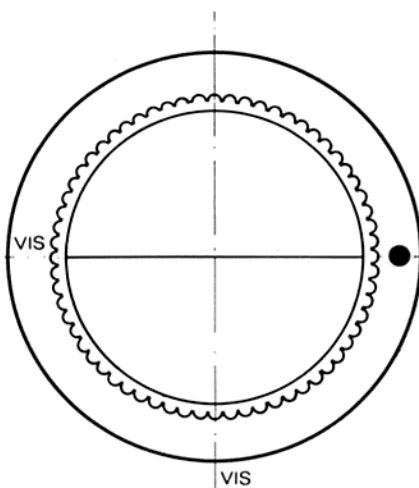

Ø	REFERENCE
4	102-17-40
6	102-17-60
8	102-17-80
10	102-17-00
1/4"	102-17-20
3/8"	102-17-90

Pour un autre coloris de tête voir page 5.