


# Bouton bas point standard


# STÖCKLI

Fixation par pince


Fixation par vis

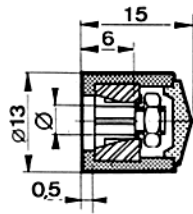


Ø	REFERENCE
3	301-13-30
4	301-13-40
5	301-13-50
6	301-13-60
1/8"	301-13-10
1/4"	301-13-20

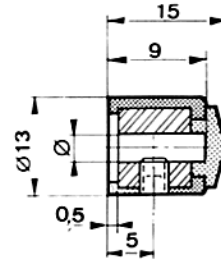


Ø	REFERENCE
3	101-13-30
4	101-13-40
6	101-13-60
1/8"	101-13-10
1/4"	101-13-20

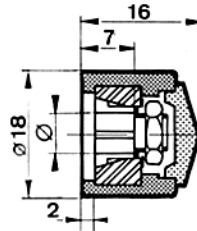


Ø	REFERENCE
3	301-14-30
4	301-14-40
5	301-14-50
6	301-14-60
1/8"	301-14-10
1/4"	301-14-20

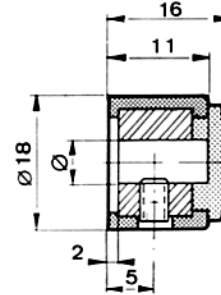

Ø	REFERENCE
3	101-14-30
4	101-14-40
6	101-14-60
1/8"	101-14-10
1/4"	101-14-20


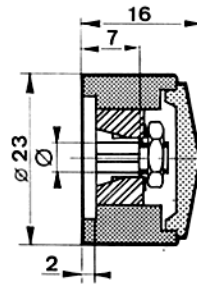


Ø	REFERENCE
3	301-15-30
4	301-15-40
5	301-15-50
6	301-15-60
1/8"	301-15-10
1/4"	301-15-20


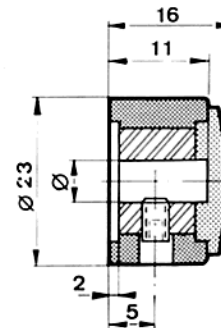


Ø	REFERENCE
4	101-15-40
6	101-15-60
1/4"	101-15-20

A vis seulement

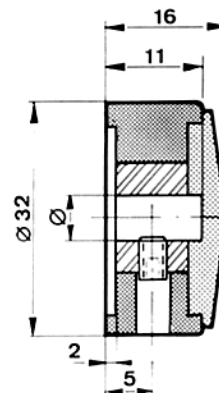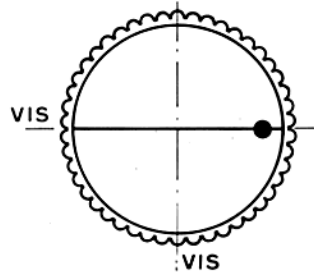

Ø	REFERENCE
4	101-16-40
6	101-16-60
8	101-16-80
10	101-16-00
1/4"	101-16-20
3/8"	101-16-90

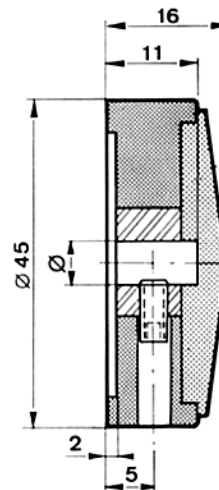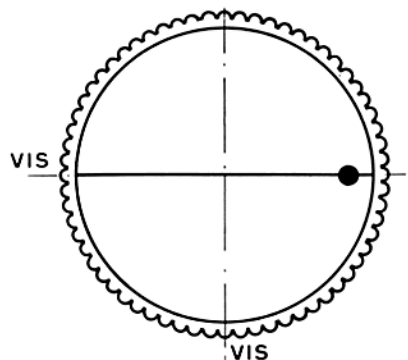

Ø	REFERENCE
4	101-17-40
6	101-17-60
8	101-17-80
10	101-17-00
1/4"	101-17-20
3/8"	101-17-90

Pour un autre coloris de tête voir page 5.