
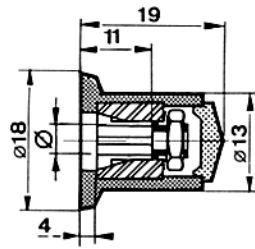


Bouton haut jupe standard


STÖCKLI

Fixation par pince



Fixation par vis

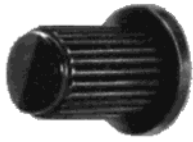


Ø	REFERENCE
3	302-03-30
4	302-03-40
5	302-03-50
6	302-03-60
1/8"	302-03-10
1/4"	302-03-20

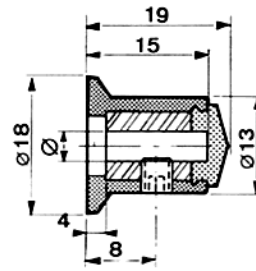



Ø	REFERENCE
3	102-03-30
4	102-03-40
6	102-03-60
1/8"	102-03-10
1/4"	102-03-20

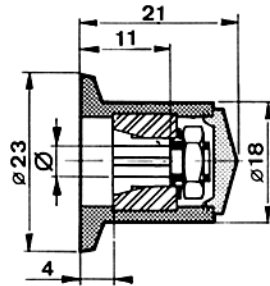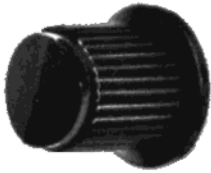


Ø	REFERENCE
3	302-04-30
4	302-04-40
5	302-04-50
6	302-04-60
1/8"	302-04-10
1/4"	302-04-20

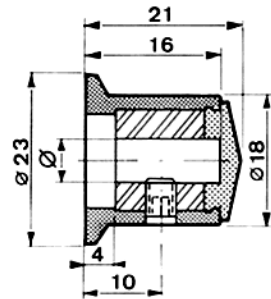


Ø	REFERENCE
3	102-04-30
4	102-04-40
6	102-04-60
1/8"	102-04-10
1/4"	102-04-20

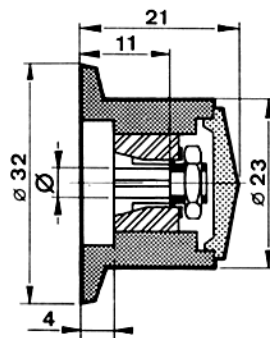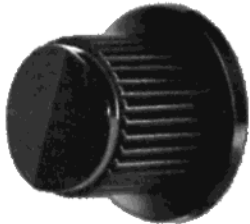


Ø	REFERENCE
3	302-05-30
4	302-05-40
5	302-05-50
6	302-05-60
1/8"	302-05-10
1/4"	302-05-20

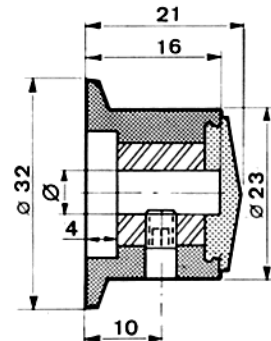



Ø	REFERENCE
4	102-05-40
6	102-05-60
1/4"	102-05-20

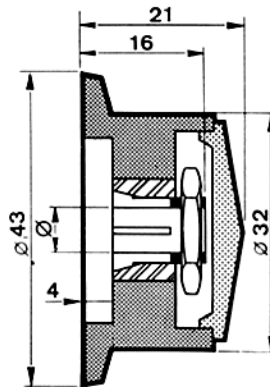

Ø	REFERENCE
4	302-06-40
5	302-06-50
6	302-06-60
1/4"	302-06-20

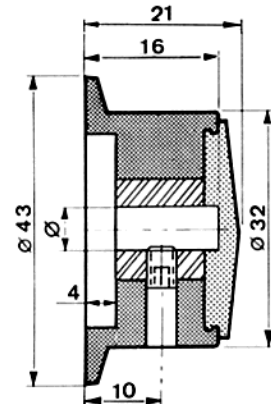

Ø	REFERENCE
4	102-06-40
6	102-06-60
8	102-06-80
10	102-06-00
1/4"	102-06-20
3/8"	102-06-90

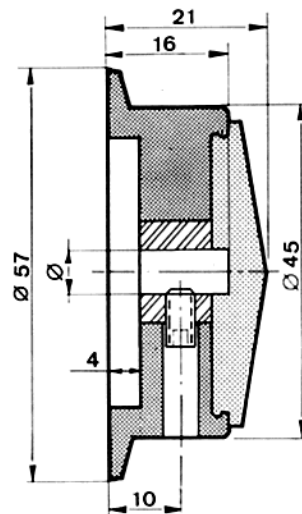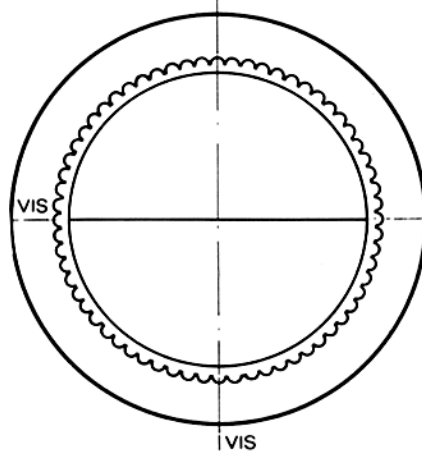

Ø	REFERENCE
4	102-07-40
6	102-07-60
8	102-07-80
10	102-07-00
1/4"	102-07-20
3/8"	102-07-90